

TECHNICAL SERVICE BULLETIN

To: All Dealers and Service Centers

From: Power Boss Technical Support

Date: 9/12/2012

Subject: TSB for HA09-1002 Programming the new 957761 Charger

Models Affected: All Phoenix 20 and Phoenix 22 battery models equipped with the 957761 battery charger.

Instructions: To change the settings, follow the directions below

1. Remove the rear metal panel on the machine.
2. Remove the 957761 charger completely from the machine.
3. Locate the rubber plug on the bottom right side of the charger.
4. Remove the rubber plug.
5. Locate the selector switch.
6. Use a small flat tip screw driver to turn the red indicator to the desired setting.
7. See the chart below.
8. Replace the rubber plug and install charger into the machine.

| Switch Selection | Battery Type |
|------------------|--|
| 1 | Flooded Lead Acid Wet Part # 956712 (115AH) |
| 1 | AGM Maintenance Free Part # 956100 (95AH) Used after 05/10/2011 |
| 2 | Flooded Lead Acid Part # 956140 (140 AH) |
| 3 | Gel Maintenance Free Part # 956135 (135AH) |
| 4 | Gel Maintenance Free Part # 956100 (95AH) Used Before 05/10/2011 |


Note: These are only settings available. For non OEM batteries select from the list above. The remaining settings do not have any additional functions.



Bottom view with plug



Bottom with plug removed

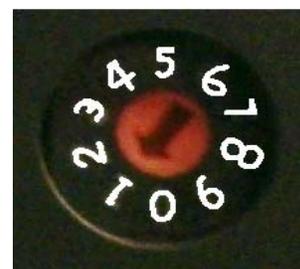

Selector Switch close up

For further assistance, questions, or comments contact Technical Support at 800-323-9420 (USA)