

TECHNICAL SERVICE BULLETIN

To: [Distributor/Customer]

From: Minuteman Technical Support

Date: 6/10/2020

Subject: TSB for ECN 151103 – New Gasket for the 97118731 Screened Float Assembly

Reason for Change

To improve the performance of the machine.

Improvement

Improves the performance and longevity of the machine.


Models/Serial Numbers Affected

Applies to all versions of the following models: All MR20, MR26, A-MR20D, A-MR20DS, E24, E26, E2830, E3030 and E3330. Machines with serial number 20010062 and following will already have the new 247660 gasket installed from the factory.-

Reference Instructions – When replacing the 97118731 Screened Float Assembly, order the new gasket part number 247660 also. Installation procedure: Remove the existing O-ring gasket from the screened float and replace it with the 247660 gasket.

See instructions and pictures on the following page.

Informational Only

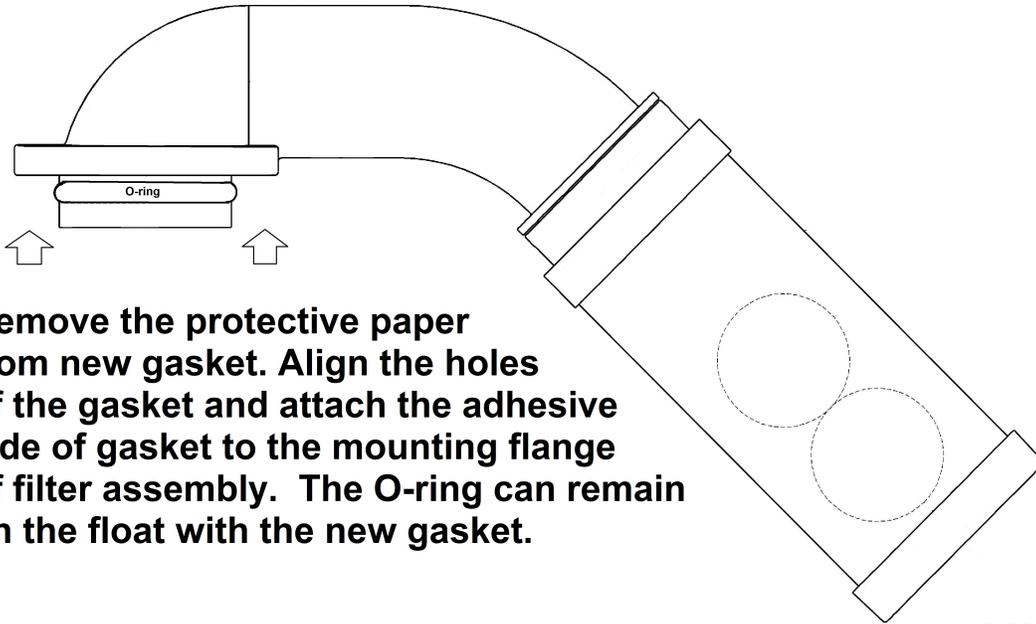

Remove the protective paper from new gasket. Align the holes of the gasket and attach the adhesive side of gasket to the mounting flange of filter assembly. The O-ring can remain on the float with the new gasket.



For further assistance, questions, or comments contact Technical Support at 800-982-7141